
Contemporary Technical Specification Robe Hook 2030

Stock Numbers:

- 2030 Double Robe Hook
 Polished Chrome Finish
 Concealed Screw Mounting
- 2030BN Double Robe Hook
 Brushed Nickel Finish
 Concealed Screw Mounting

Dimensions:

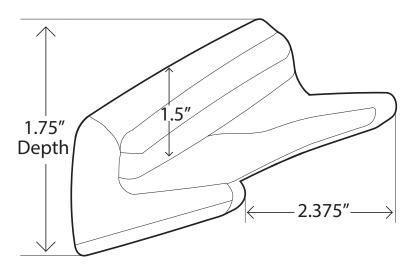

Materials:

Robe Hook is die cast from highest quality zinc alloy (zamac). Castings are triple plated with a polished brass or a polished chrome finish.

Installation Instructions:

- 1. Remove mounting bracket from back of fixture by loosening the set screw.
- 2. Position unit on wall in desired location.
- 3. Lightly mark the outline of the base of the unit.
- 4. Center mounting bracket inside the outline.
- 5. Mark hole locations. Attach bracket to wall using 1-3/8" screws (provided)
- 6. Mount base on bracket. Tighten set screw on the bottom.

Note: Wood blocking is preferable behind all wall surfaces. If wood blocking is not available, the following optional fasteners are suggested: Tile/Masonry - Plastic or Lead Anchors!; Plaster/Drywall Toggle Bolts.

Cleaning Instructions:

To preserve the fine finish of this product, clean only with a soft damp cloth. Dry well. Do not use commercial or abrasive cleaners.

Stock Number:	Robe	Hook
By MOEN		



25300 AL MOEN DRIVE • NORTH OLMSTED, OH 44070 CORPORATE HEADQUARTERS: (800) 321-8809 • FAX: (800) 848-6636 INTERNATIONAL: (440) 962-2000 • FAX: (440) 962-2726 CUSTOMER SERVICE (USA): 800-882-0116 • FAX: (888) 379-2720 WWW.MOEN.COM

©Copyright Moen Incorporated